



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## PACIFICA STOW & GO SEAT BRACKET INSTALLATION

*Immediately upon delivery, open all packages and check the contents of the shipment. Report any issues directly to SCP within 15 days. After 15 days, SCP will not be responsible for missing or damaged items.*

### HARDWARE

- |                                                                                                                                                                                                         |                                                                                                                                  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>• (2) ½ X 11/16" X 1/4" SPACER</li> <li>• (4) M10 X 30 WASHER</li> <li>• (2) M10 NYLOCK NUT</li> <li>• (2) M10 X 20 BOLT</li> <li>• (2) M10 X 45 BOLT</li> </ul> | <ul style="list-style-type: none"> <li>• (2) M10 WAVY WASHER</li> <li>• (8) M8 NYLOCK NUT</li> <li>• (8) SOCKET BOLTS</li> </ul> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|

### TOOLS REQUIRED

- |                                                                                          |                                                                                          |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>• 13 MM SOCKET</li> <li>• 13 MM WRENCH</li> </ul> | <ul style="list-style-type: none"> <li>• 17 MM SOCKET</li> <li>• 17 MM WRENCH</li> </ul> |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|

### INSTALLATION INSTRUCTIONS

**WARNING: SEAT IS SPRING LOADED. BE CAREFUL WHEN PULLING THE LEVER IF NOT ACTUALLY SITTING IN THE SEAT.**

1. If you've purchased the seats on your own, remove seatbelt buckle(s) from the seat(s). This has already been done for you if you purchased the seat(s) from Small Car Performance.

- Remove stock VW seats.
- We strongly recommend test fitting the brackets in your van before installing onto the Pacifica Stow & Go Seat(s).
- Remove the plastic sleeve (if present) that rests inside the tracks.
- Slide seat bracket onto the track. The bracket should go on smoothly, but if not, it will be important to remove any debris and adequately clean. You may even have to pry up or hammer down any metal tabs that may be interfering with the bracket sliding back and forth.



These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## PACIFICA STOW & GO SEAT BRACKET INSTALLATION

6. Remove the brackets from the van and prepare to install brackets on the underside of the Pacifica Stow & Go seat(s).

7. With the seat collapsed, and upside down, attach the angle iron to both sides of the seat. The following steps will be repeated for both sides of the seat(s).

8. The angle iron at the front of the seat mounts with the M10 x 45 bolt, M10 x 30 washer (you may need (2) washers for spacing – depending on your seats an van), and  $\frac{1}{2}$  x  $\frac{11}{16}$ " x  $\frac{1}{4}$ " spacer.

9. Thread the angle iron over the bolt and spacer and secure with a M10 Nyloc Nut.




These instructions and the images herein are proprietary. Any unauthorized reproduction is prohibited.

## PACIFICA STOW & GO SEAT BRACKET INSTALLATION

10. Secure the rear angle iron attachment point with a M10 X 20 bolt and M10 Wavy Washer (as seen here without the angle iron).



11. Secure the seat bracket slider to the angle iron – making sure the slider arm is facing the front of the seat – with the four socket bolts and M8 Nylock Nuts.
12. It is advisable to thread all bolts and loosely thread the nuts for before tightening.

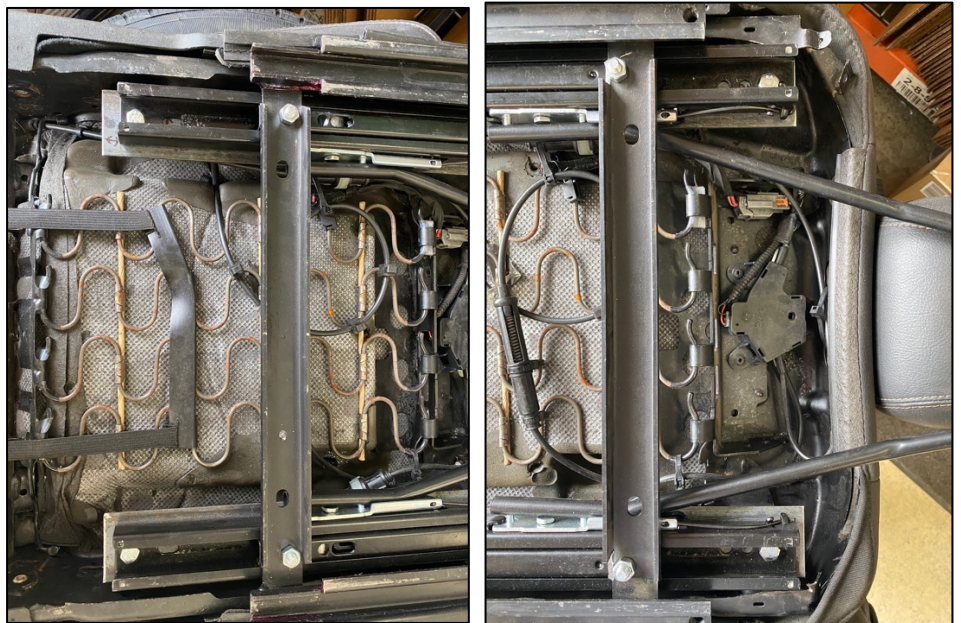

13. Slide brackets and seats onto the van's tracks. The passenger seat can be done with the seat folded or extended. Do whichever is more convenient

14. The driver seat can only be installed fully extended because of the steering wheel. This will take a bit of maneuvering.

**CONGRATULATIONS! YOU'RE DONE. ENJOY YOUR NEW PACIFICA STOW & GO SEATS**